

UNDERCOVER SWING CASE

Swing Away - Work or Play!

PRODUCT INSTALLATION GUIDE



Thank you for purchasing the UnderCover Swing Case!


- Read instructions completely before installing your Swing Case to your truck.
- The Swing Case is designed for trucks that do not have a bedliner (spray in bedliners pose no problem). Trucks that do have plastic drop in bedliners or Bed Rugs will require some trimming of the liner to ensure proper fit of the brackets. We provide some guidelines for installing with liners, however due to the wide variety of liner manufacturers, the modifications will vary. Any modifications must be made to the liner and NOT to the Swing Case mounting hardware. Modifications to the mounting hardware could result in improper installation and will void your warranty.
- The Swing Case is left and right specific. They will not interchange.
- ⚠ The Swing Case will not work with bed extenders.
- Upon opening the Swing Case lid there could be an odor of glue. This is a non toxic adhesive that we use during the assembly of the box. The odor will go away as the lid is opened and closed a few times.
- 1 Year Warranty – See Back Cover.

**For Warranty Issues, contact UnderCover Directly
(866) 900-8800 or visit www.undercoverinfo.com**




For Trucks with Plastic Bed Liners: See Addendum A
For Trucks with Bed Rugs: See Addendum B

Step 1

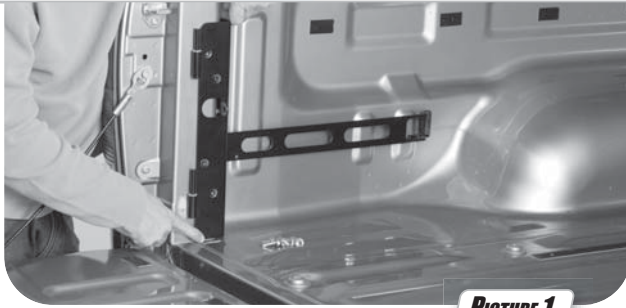

PICTURE 1

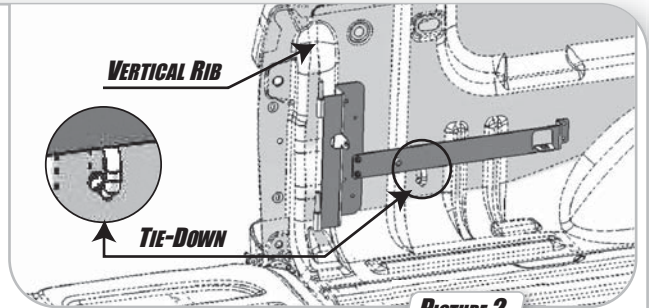

PICTURE 2

• INSTALLING MOUNTING BRACKET

Remove the brackets from inside the box, unwrap and position the bracket to the light well/wheel well area. On some trucks it may be necessary to remove the tie down. Make sure the bracket is tight up against the sheet metal of the truck bed – **Picture 1**. The bottom of the bracket should be flush to the bottom of the truck bed on all trucks except for the 2007-C Chevy/GMC. For the 2007-C Chevy/GMC trucks you will need to rest the horizontal part of the bracket directly on top of the tie down, level with the bed floor. The vertical part of the bracket should be tight against the vertical rib on the truck – **Picture 2**.

Step 2



PICTURE 3



PICTURE 4

• INSTALLING MOUNTING BRACKET (continued)

Using the self drilling screws provided. Attach the bracket to the truck – **Picture 3 and 4**. Be careful not to over-tighten and strip out the holes.

Step 3



PICTURE 5




PICTURE 6

• INSTALLING SWING CASE


Lower the box onto the hinge pins. The latch is currently in the closed position for shipping. Before swinging the box to the stowed position for the first time, pull the rod to release the latch. Gently push the box to the stowed position. Pull the latch rod and swing through the full motion making sure it operates freely and latches easily – **Picture 5 and 6**. Do not slam the box to stow it, if it will not latch easily it may be necessary to make some minor adjustments. The rotary latch has slotted holes, just loosen the two bolts and adjust as needed. Be sure to blow or sweep the metal shavings out of the truck bed.

If your Truck has a Plastic Bed Liner: See Addendum A
If your Truck has a Bed Rug: See Addendum B

Addendum A

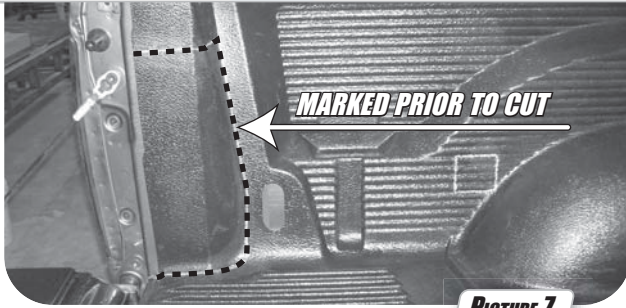

PICTURE 7

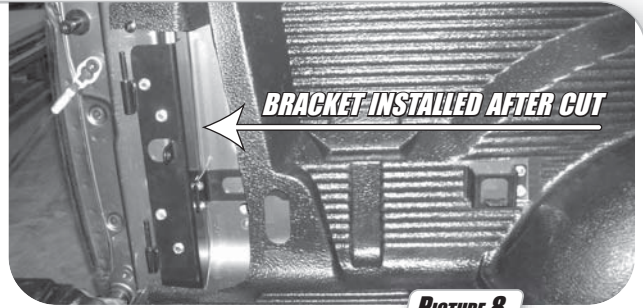


PICTURE 8

• **FOR TRUCKS WITH PLASTIC BED LINERS**


For trucks with plastic bed liners it will be necessary to trim the liner. **⚠ DO NOT INSTALL THE BRACKETS ON TOP OF THE BEDLINER.** The brackets will not fit over the plastic bedliner, the brackets must be attached directly to the sheet metal.

Hold the brackets up against the bedliner in their approximate location. Using a grease pencil, mark lines to indicate where to cut the bedliner **Picture 7**. Once you have finished trimming your bedliner, install the brackets (**Picture 8**) per the instructions in **Steps 1 through 3 (previous page)**. Due to the fact that all the brands of bed liners fit differently we can not provide exact instructions as how much of your liner to trim. These pictures are only an example and may not accurately depict your specific situation.

Addendum B

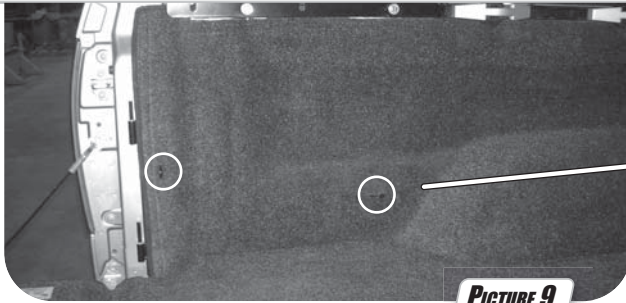

PICTURE 9

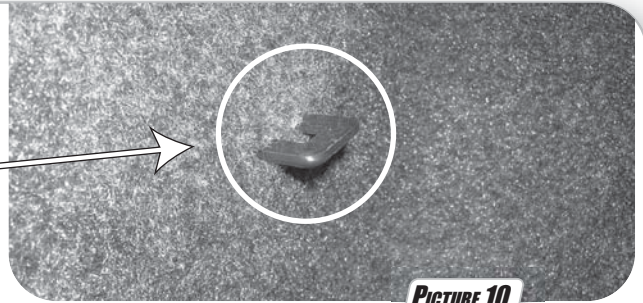

PICTURE 10

• **FOR TRUCKS WITH BED RUGS**

For trucks with Bed Rugs it will be necessary to cut slots in the material. **⚠ DO NOT INSTALL THE BRACKETS ON TOP OF THE BED RUG.** Most of the brackets will fit under the bed rug, pull the Bed Rug loose from the corner, remove any hook and loop strips that may be in the way of the brackets, and install the brackets per instructions in **Steps 1 through 3 (previous page)**.

Remove the rubber bumper from the horizontal part of the bracket and put the Bed Rug back into place. Push the rug around the latch bracket and cut a slot to allow it to stick through. Push the rug around the pad lock piece and cut a slot to allow it to stick through – **Picture 9 and 10**. You will need to re-attach the Bed Rug to the truck bracket at the light well using the existing hook and loop strips. On 2007-C Chevy trucks the horizontal part of the bracket at the light well is spaced away. On this application you may cut a slice along the edge of the light well and slide the latch bracket behind the rug.

• **CONGRATULATIONS!**

You have just installed the most versatile tool box on the market.

**For Warranty Issues, contact UnderCover Directly
(866) 900-8800 or visit www.undercoverinfo.com**



UNDERCOVER SWING CASE

1 YEAR LIMITED WARRANTY

Terms of this Warranty. E. D. Industries, Inc. warrants that the ABS polymer structure of your Swing Case will be structurally free from defects in material and workmanship for (1) one year from the retail date of purchase. The lock, hinges, and hardware are warranted to be free from defects in material and workmanship for (1) one year from the retail date of purchase. This warranty applies only to the original purchaser and is nontransferable. Your original sales receipt will serve as proof of purchase for this warranty. **Be sure to retain your receipt for your proof of purchase date.** Before credit can be issued on a warranty claim, proof of defect may be required. This can be determined at the time of the claim.

Exclusions of this Warranty. Not covered under this warranty is failure due to neglect, improper installation including any modifications to installation hardware, alterations, addition of equipment, abuse, accident, weather related damage exposure to chemicals that are not labeled "safe for plastics", and normal wear from lack of maintenance.

Caution. Always read the ingredients of any product you are using to clean your Swing Case. Make sure that you use only products that are safe for use with plastics. Many chemicals contain material that will permanently discolor your Swing Case. This is not considered a manufacturer defect.

Owner Responsibilities. Incidental or consequential damage or loss of contents due to use, neglect, lack of maintenance, misuse, or abuse of the Swing Case is the sole responsibility of the truck owner and operator. Paint damage to your truck is not covered under this warranty. When operating your truck always keep the Swing Case in the stowed position with the lid closed and latched.

Repair and Replacement. In the event that your Swing Case is found to be defective under the terms of this warranty, it is at the discretion of E. D. Industries, Inc. to repair or replace the defective part. All repairs must be made by an authorized Swing Case dealer or under the direction by the factory. In the case of either event, E. D. Industries, Inc. is not responsible for any transportation costs associated with the warranted claim.

Maintenance & Care. The ABS polymer body of your Swing Case requires only periodic cleaning with mild car wash soap. ONLY USE CLEANERS, WAXES OR PRODUCTS THAT ARE LABELED "Safe for use on plastics". Do not let chemicals or substances come into contact with your Swing Case, unless labeled "safe for plastics". Avoid use of all abrasive type cleaners as they may dull the finish. Be sure that products such as OFF® or other insecticides do not get onto the Swing Case from contact with your hands or other parts of your body. This could cause serious damage and discoloration.

E. D. Industries, Inc. / UnderCover • P.O. Box 620 • Rogersville, MO 65742

"If the quality is built-in, you know it's an UnderCover!"

Customer Service: (417) 753-8000 • (866) 900-8800

www.undercoverinfo.com

sales@undercoverinfo.com

© 2008 E. D. Industries, Inc.
All Rights Reserved.

